



Flex makes you free

BRAVO & LOGIQ User's Manual



Due to continuous improvements of our products, specifications and appearances may change without prior notice.

EFFECTIVE DATE: DKSM- 201402

For safety, please follow the instructions in this manual.




Table of Contents

■ Product Contents (Bravo).....	02
■ How To Assemble (Bravo).....	05
■ Basic Operation (Bravo).....	11
■ Product Dimension (Bravo).....	17
■ Product Contents (Logiq).....	19
■ How To Assemble (Logiq).....	21
■ Basic Operation (Logiq).....	26
■ Product Dimension (Logiq).....	28
■ Trouble-Shooting Guide.....	29
■ Safety Precaution.....	30
■ Limited Warranty.....	31

TIP!

For warranty claim, you shall refer to Barcode Number underneath the mechanism body.


RL 2008110000200003

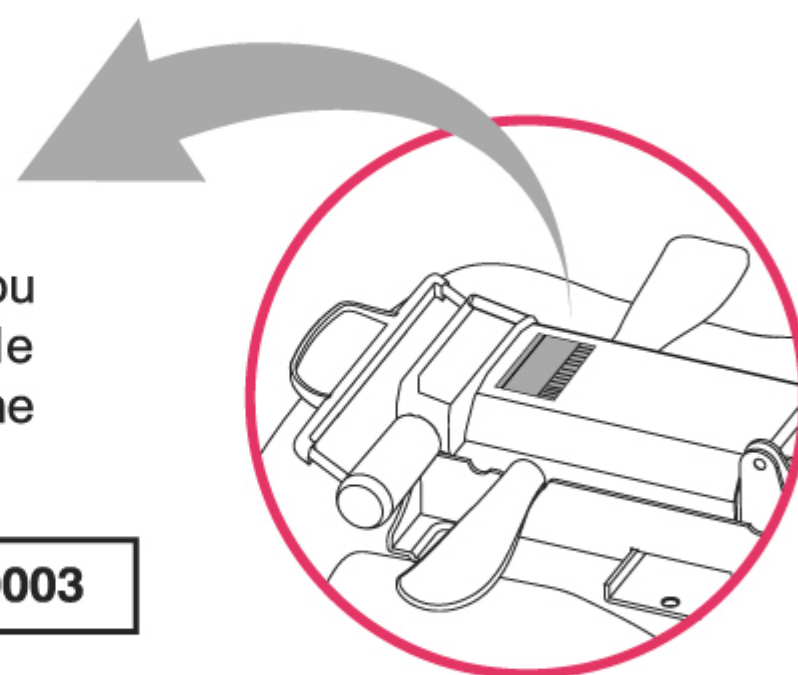


Product Contents (BRAVO)

Please ensure that all items displayed below are included in the packaging for your product.

GENERAL PARTS AND ITEMS

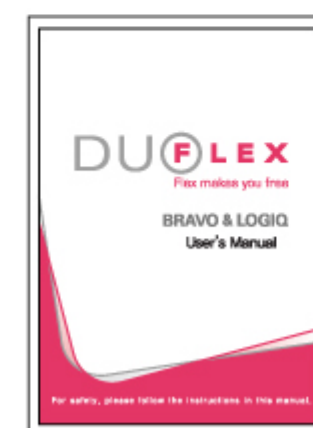

① User's Manual

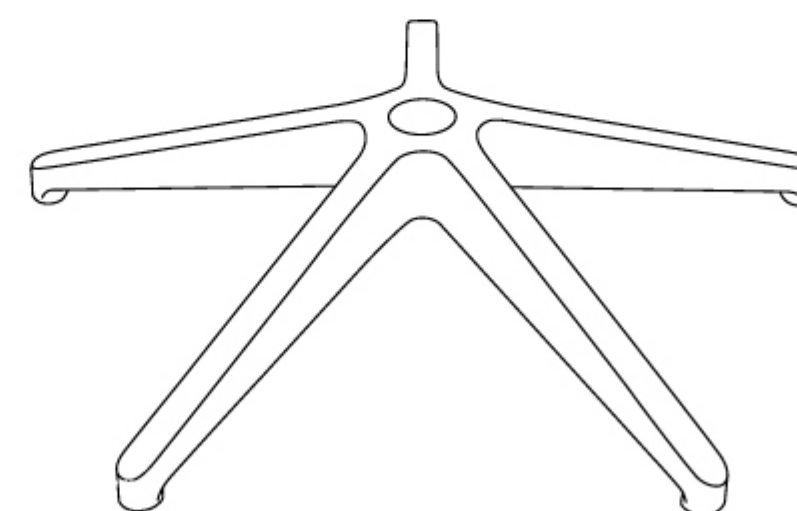


② Starbase x1




③ Allen Wrench x1



④ Spindle x1

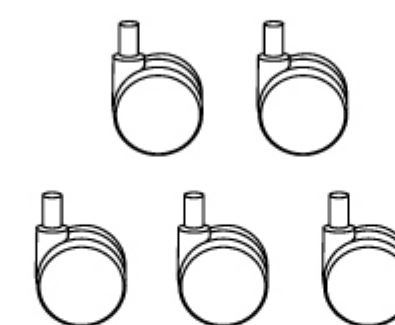



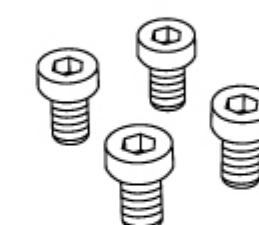


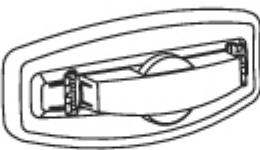

⑤ Caster x5



⑥ Bolt Screw x4

* ③,④,⑥ are included inside the inner-box.

■ Individual items subject to the product model number


BRAVO								MODEL NAME								
			BR050M	BR050C	BR050S	BR150S	BR250M	BR250C	BR010M	BR010C	BR010S	BR010L	BR100S	BR100L	BR200M	BR200C
HEADREST									O	O	O	O	O	O	O	O
BODY	MESH		O				O		O						O	
	COMBI (MESH/FABRIC)			O				O		O						O
	SPONGE (FABRIC)				O	O					O		O			
	LEATHER											O		O		
LUMBAR SUPPORT	FUNCTIONAL					O							O	O		
	PAD						O	O							O	O



How to Assemble (BRAVO)


STEP 1

Please use the pad provided in the product packaging and lay it on the ground. Place the seat base on the protective padding as illustrated in the image below.

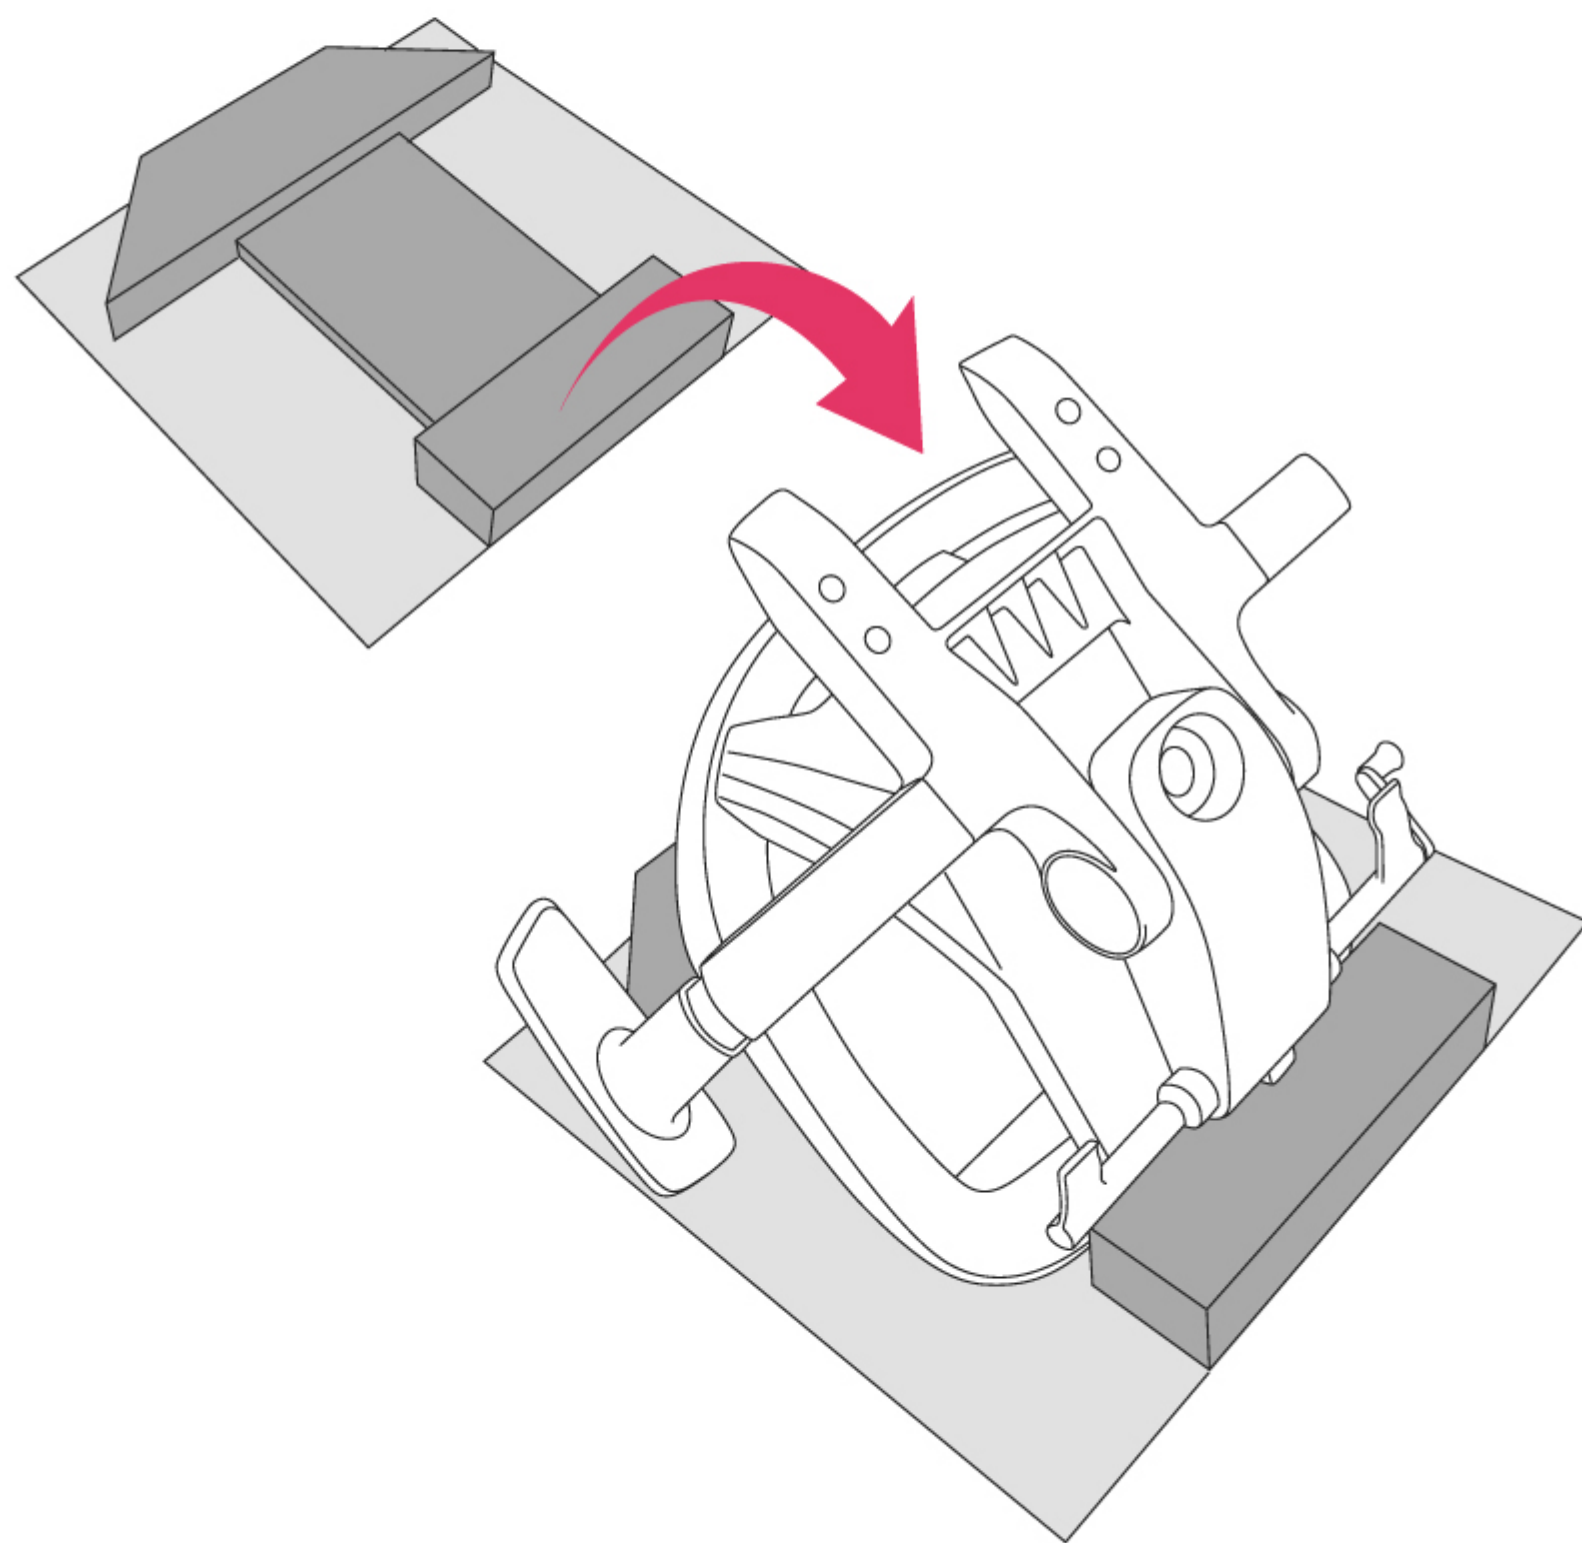

STEP 2

Insert the backrest to the seat base as illustrated in the image below. Once the 4 connecting holes are lined up, use the Allen wrench and bolt screws to secure backrest to seat base.

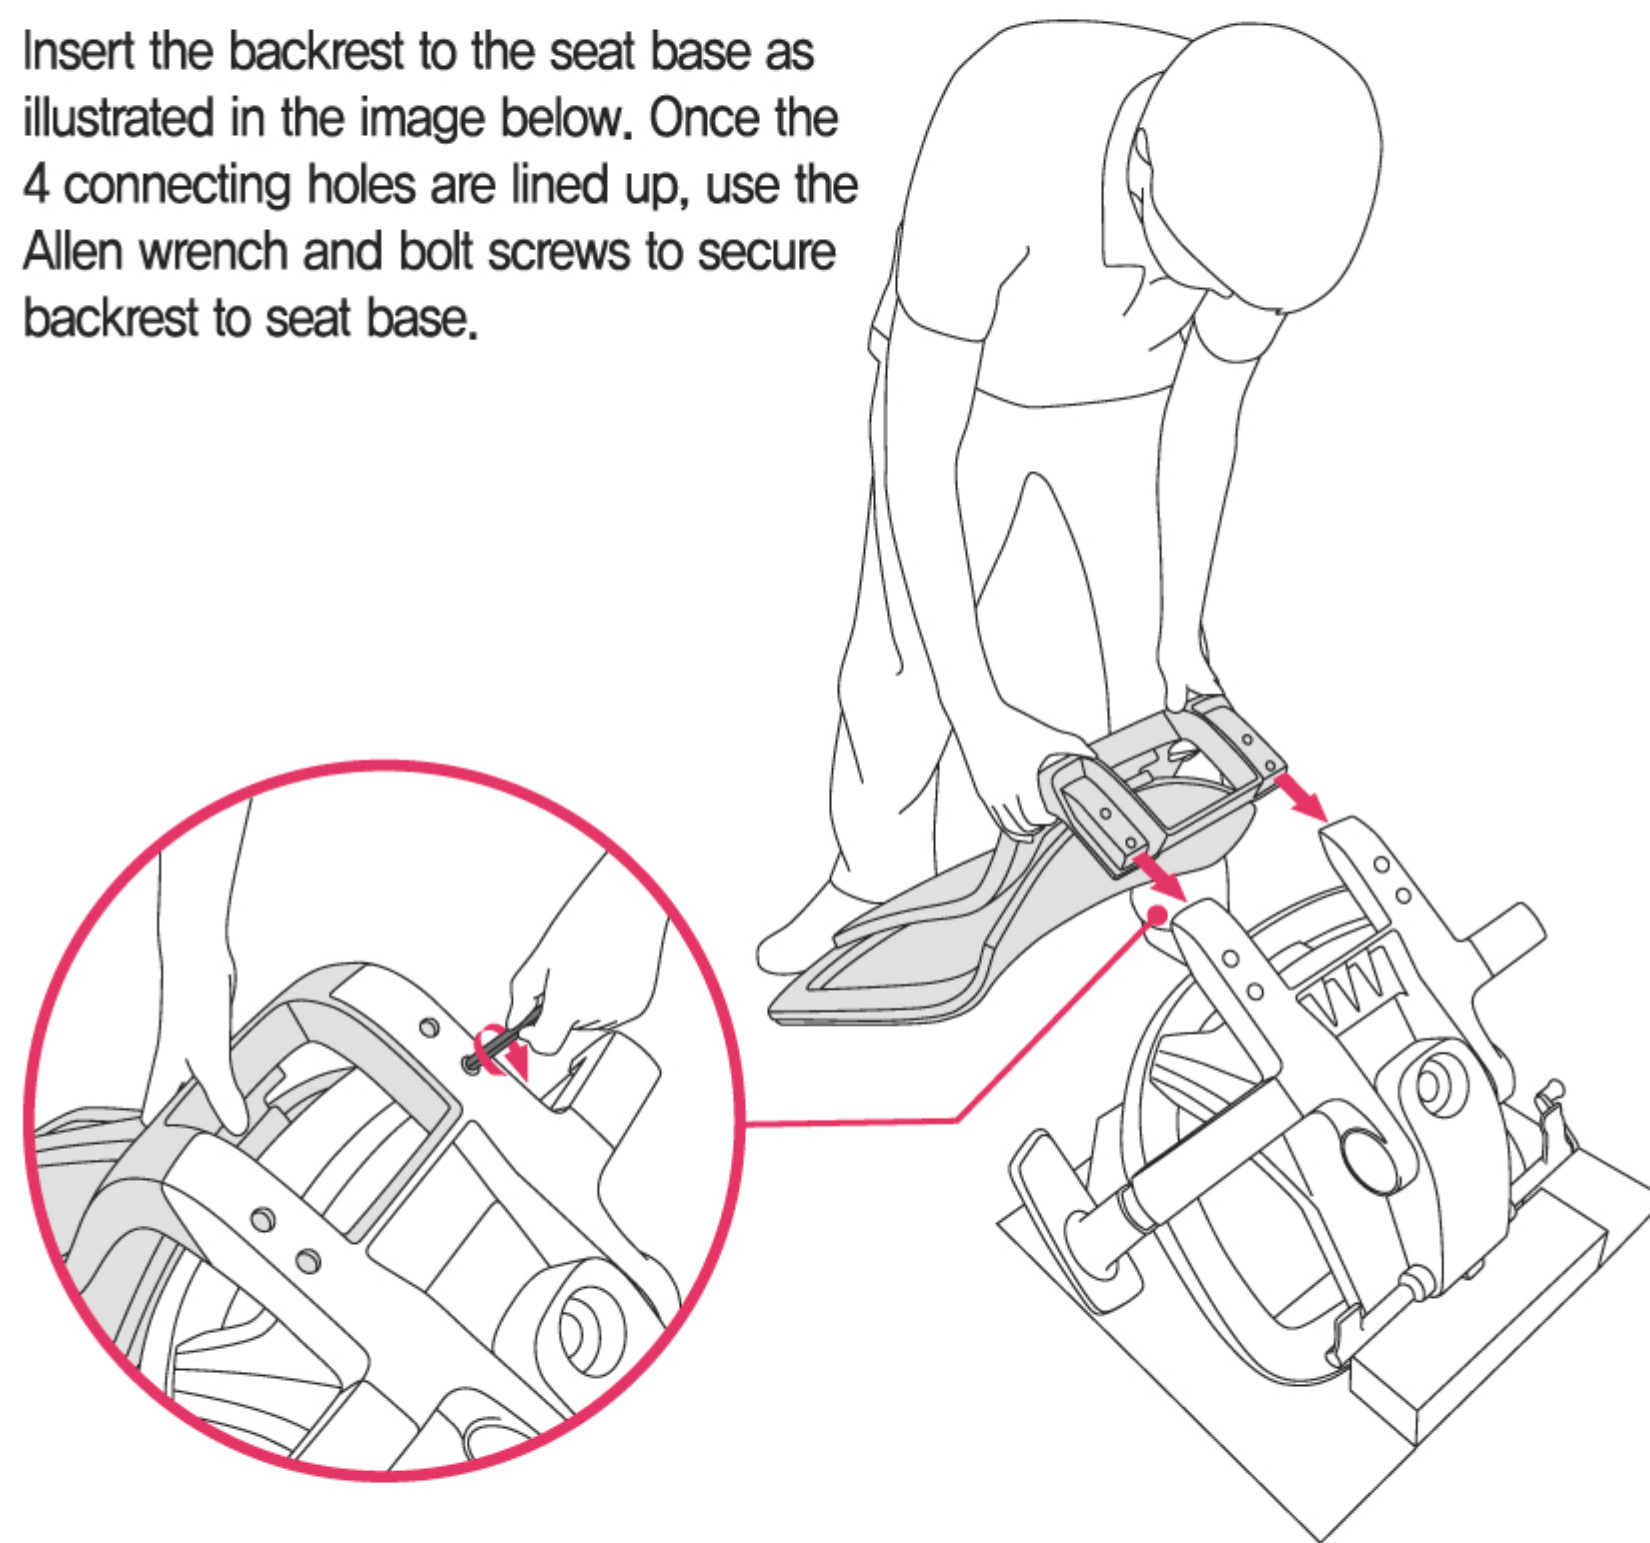

※ Warning:


Lightly tighten each screw to ensure that the seat base and backrest are aligned. When aligned, screw tightly.

2

How to Assemble (BRAVO)


STEP 3

Remove the star base from the packaging. Locate the wheel casters. Insert wheel casters into the pre-designated holes underneath the star base. When inserting, you should feel a click and the caster locking in place.

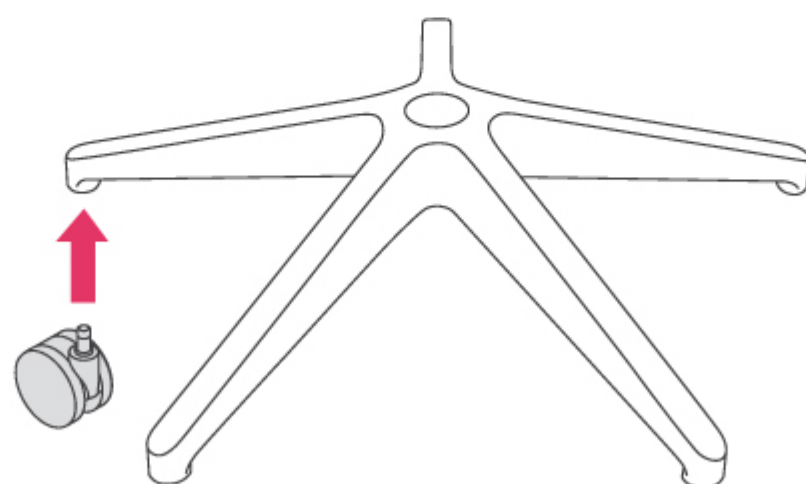

STEP 4

Remove the spindle from the packaging. Insert the spindle into the star base as illustrated below.

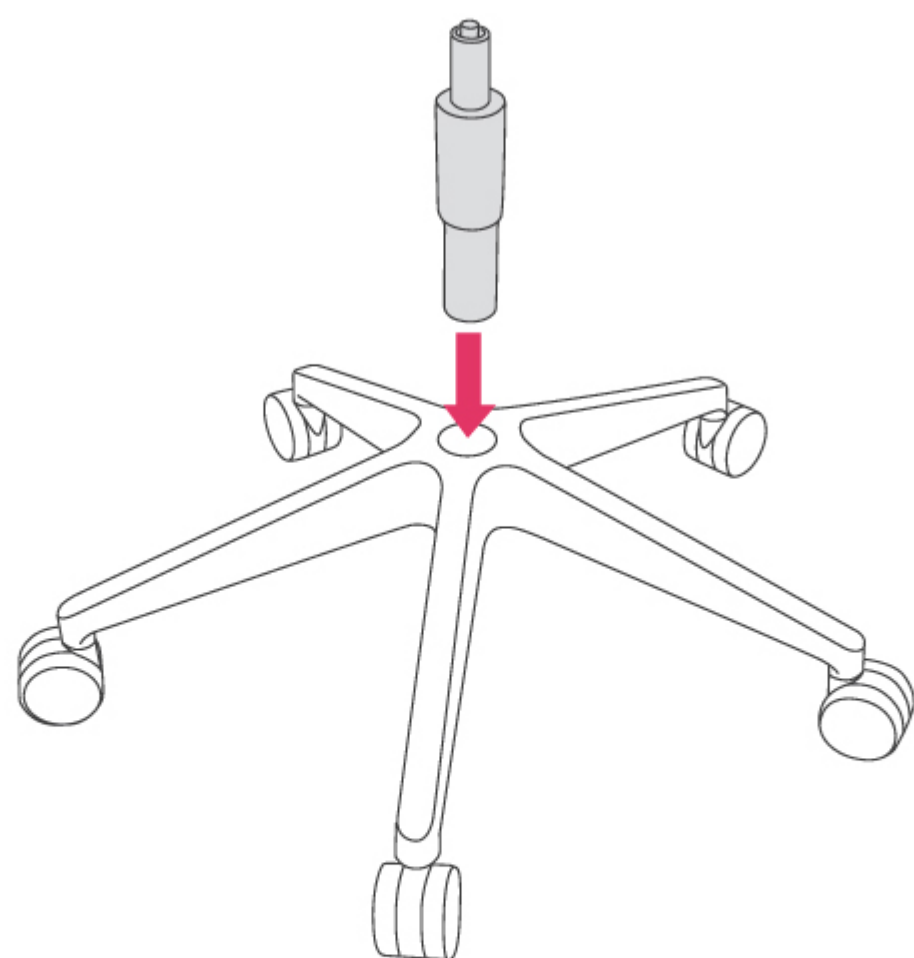


STEP 5

Lift the finished backrest and seat base and insert atop the spindle as illustrated below.



STEP 6 Insert the headrest as shown in the illustration below.

(This step only applies to models BR200M, BR010M, BR200C, BR010C, BR100S, BR010S, BR100L and BR010L)

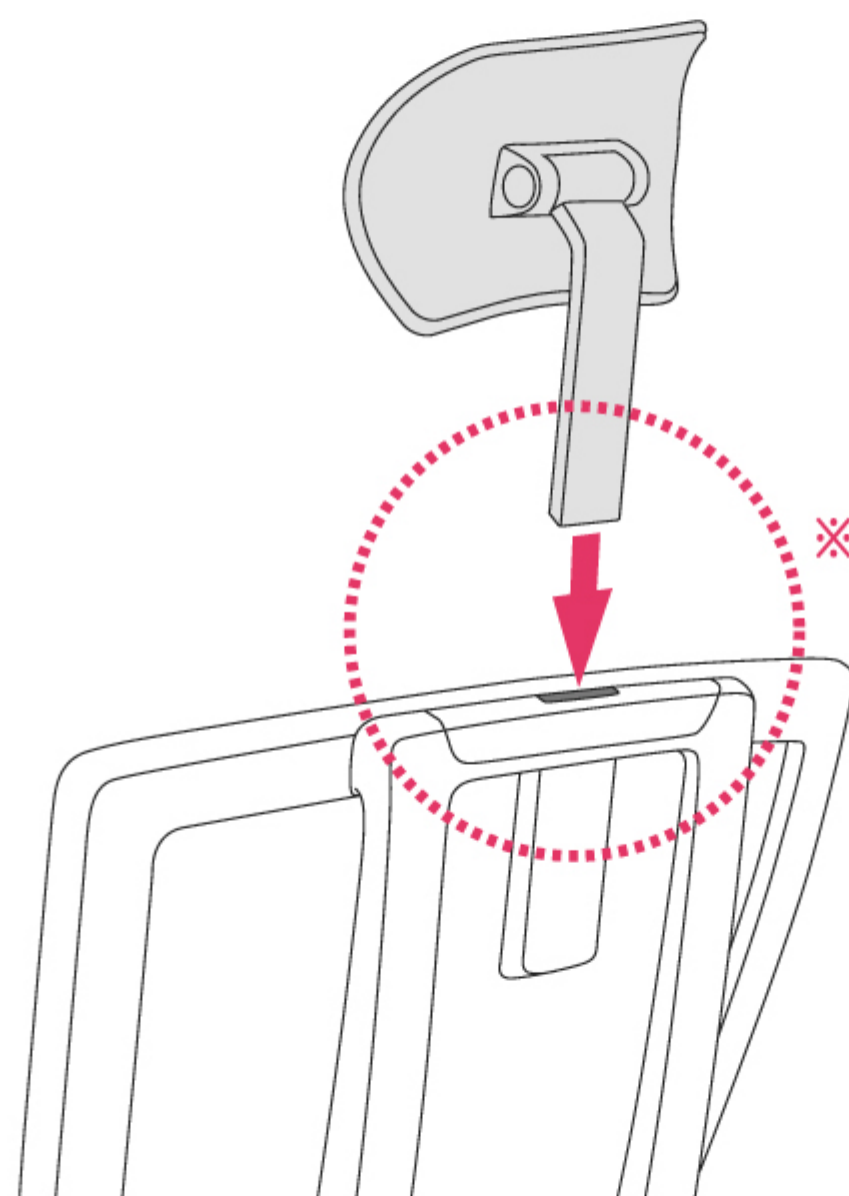

※ Attention:


When locked in place, you should hear a click.

STEP 7

Installation is complete! Please read the operation manual for operation of your new chair.

TIP!

Your operation manual is located underneath the seat base on the left side.

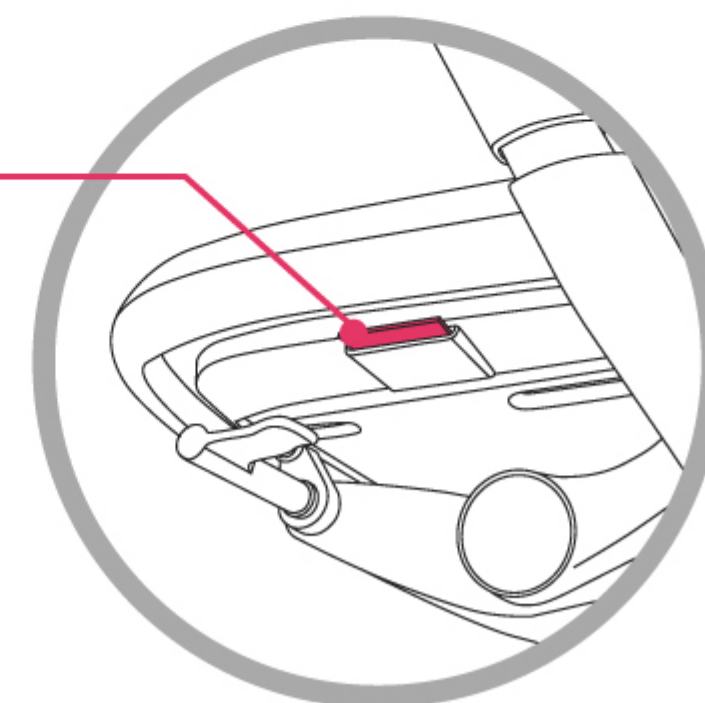

※ For mesh chairs, the operation manual is packed together with casters.

(MODEL: BR200M, BR010M, BR250M, BR050M)


COLOR & MATERIALS BY MODEL

MODEL	COLOR		MATERIALS
BR200M, BR010M, BR250M, BR050M	Backrest	Line Mesh Black / Line Mesh Red Line Mesh Green / Line Mesh Grey	Structure: Steel, Aluminum, Plastic Surface Treatment: Polyester Coating Finish: 100% Polyester Cushion: Urethane Foam
	Seat pan	Check Mesh Black	
BR200C, BR010C, BR250C, BR050C	Backrest	Line Mesh Black / Line Mesh Red Line Mesh Green / Line Mesh Grey	
	Seat pan	Dot Black	
BR100S, BR010S, BR150S, BR050S	Backrest	Dot Black / Dot Red / Dot Green Dot Grey / Dot Blue / Dot Brown	
	Seat pan	Dot Black	
BR100L, BR010L	Backrest/Seat pan	Black Genuine Leather	




Basic Operation (BRAVO)

1. Seat Height Adjustment

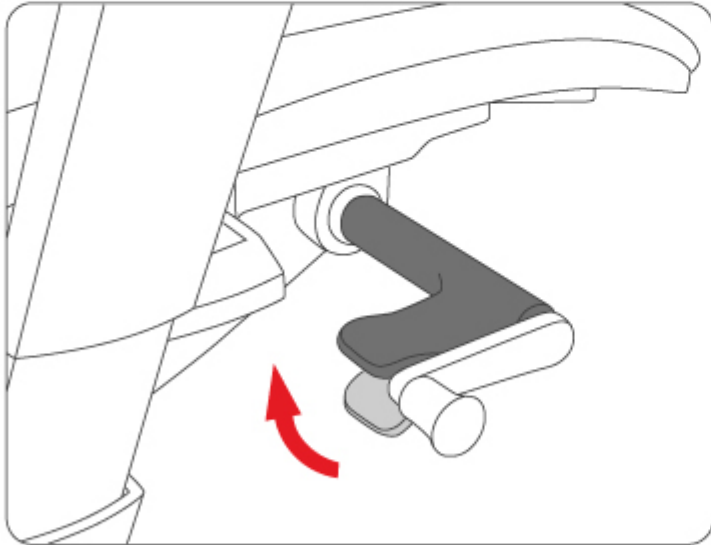



To raise the seat, lift body off the seat and pull lever up. Release lever at desired height. To lower the seat, lift lever up WHILE sitting down and release at desired height.

2. Tilt Tension Adjustment

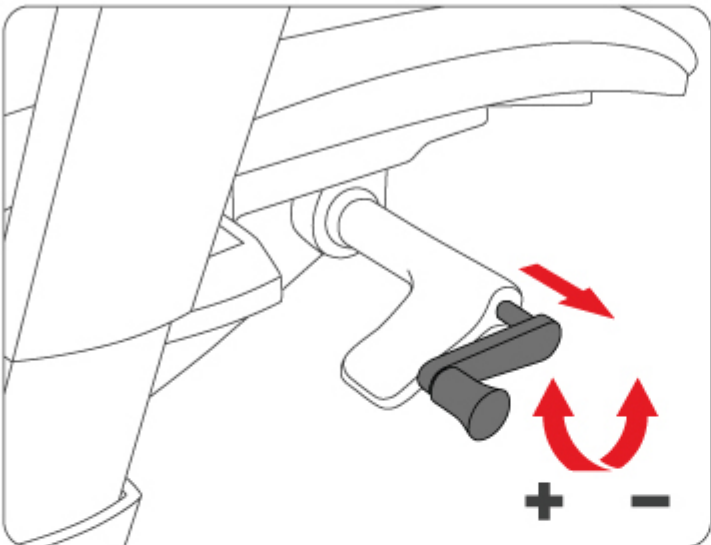


To adjust the tension of the tilting mechanism in the seat, pull knob lever that is located on the height adjustment lever away from the seat. It should click out. Turn clockwise for more tension and turn counter-clockwise for less tension.

3. Tilt Limit Adjustment

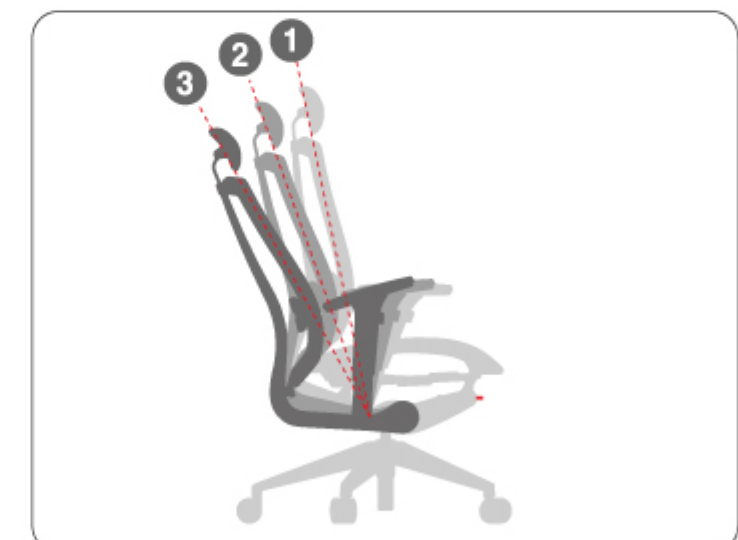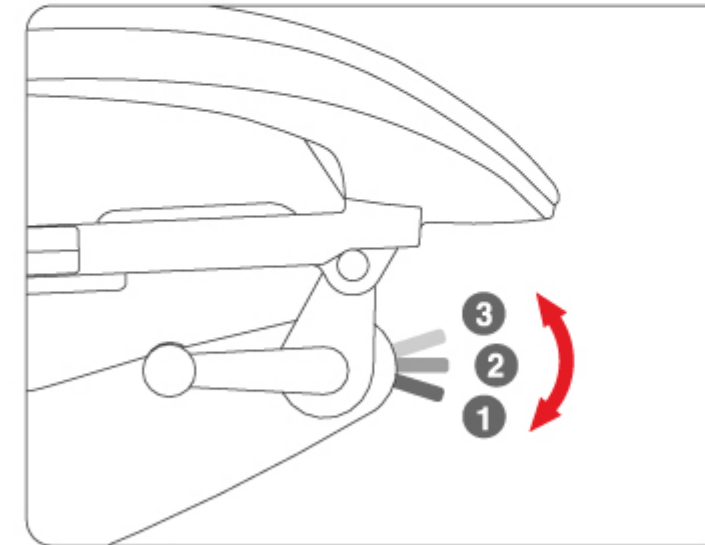

A limit can be set on how far the tilting reaches by utilizing the bar protruding from the front of the mechanism body. (Setting 1: 8 degrees / Setting 2: 15 degrees / Setting 3: 25 degrees)

4. Tilt Lock

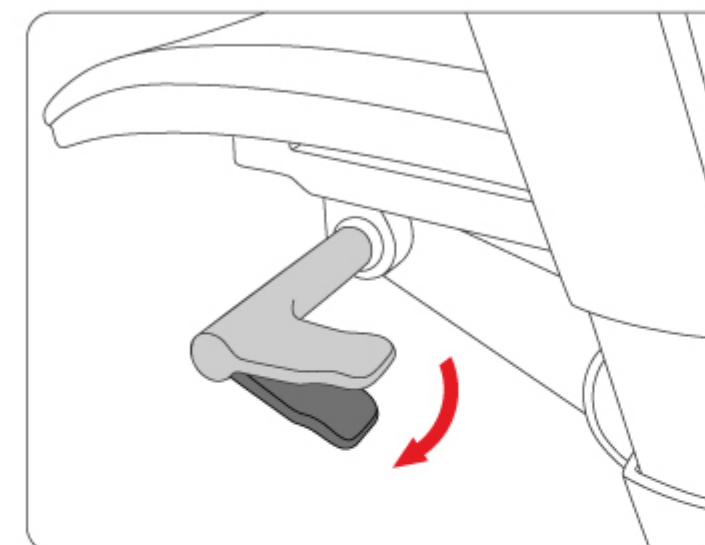

To utilize the tilt-lock system, tilt the backrest to the desired degree. Then, grasp the lever located on the left side of the chair and turn clockwise. This will lock the chair at the desired tilt. To release, turn lever counter-clockwise.



Basic Operation (BRAVO)

5. Armrest Height/Angle/Reach Adjustment




◀ Armrest Height Adjustment

Press the button located on the armrest arm and underneath the armrest in the front. While pressing this button, raise or lower armrest to desired height.



◀ Armrest Reach Adjustment

By holding and “sliding” the armrest top backward or forward, you can adjust the reach of the armrests. Each position clicks into place.

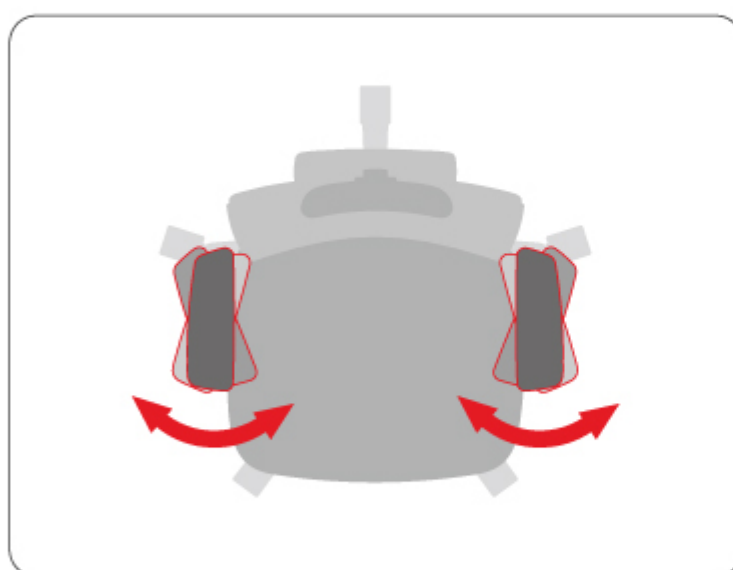

◀ Armrest Angle Adjustment



By holding and “twisting” the armrest top sideways, you can adjust the angle of the armrests. Each position clicks into place.

13

6. Lumbar Support Adjustment

■ Option 1_Functional Lumbar Support

(Only available in BR100S, BR150S and BR100L models.)

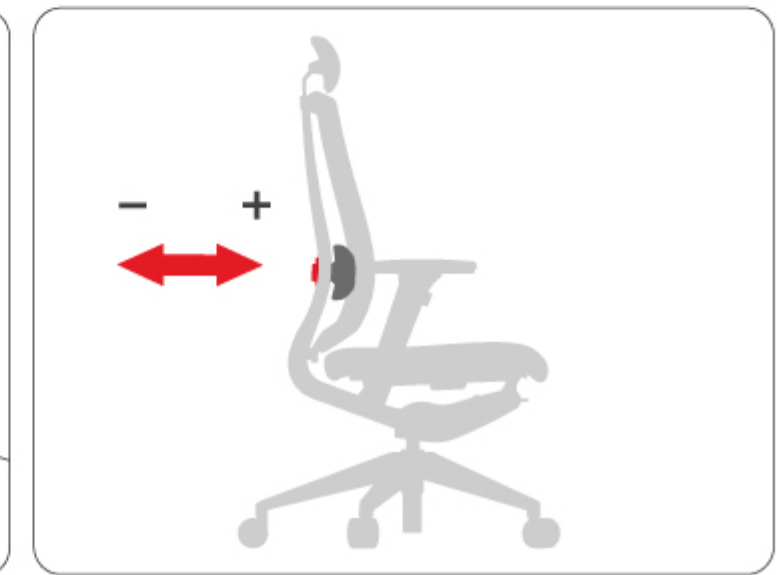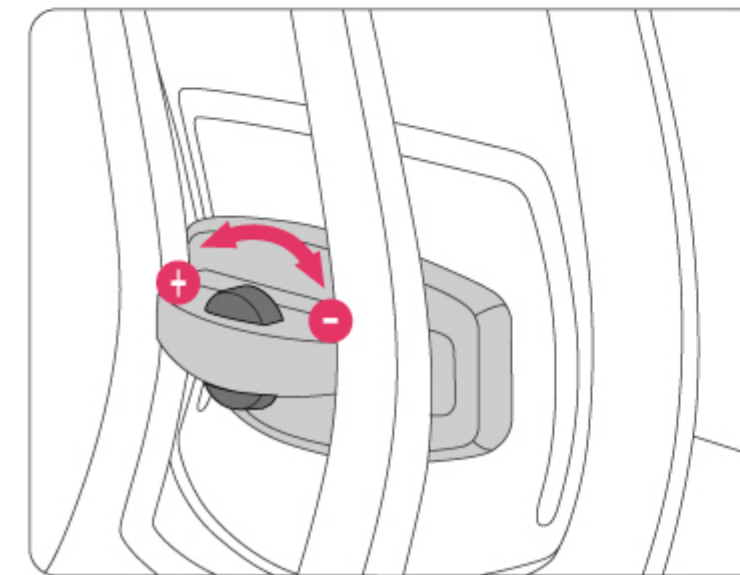

▲ Depth Adjustment

The depth of the lumbar support can be configured by utilizing the dial located behind the seat rest. For more depth, turn dial counter-clockwise and for less depth, turn dial clockwise.

► Height Adjustment

The height of the lumbar support can be adjusted by lifting or lowering the lumbar support mechanism.




14



Basic Operation (BRAVO)

■ Option 2_ Pad Lumbar Support


(Only available in BR200M, BR250M, BR200C and BR250C models.)

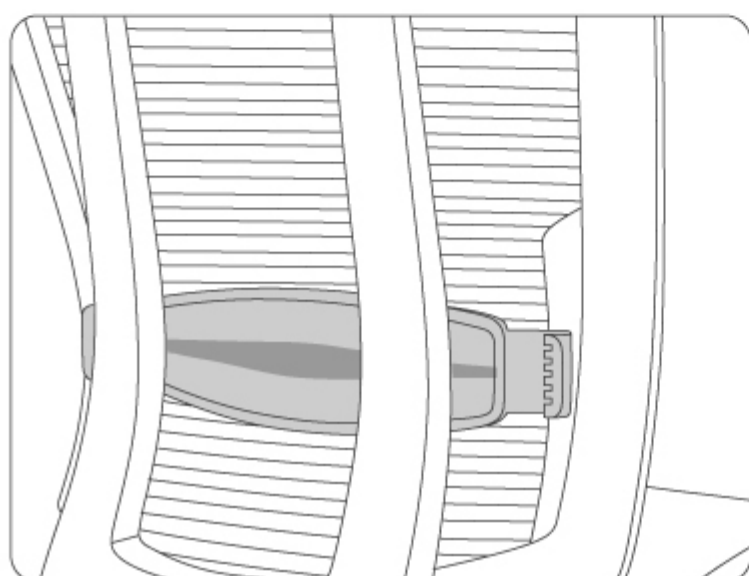

▲ Height Adjustment

The height of the lumbar support can be adjusted by lifting or lowering the lumbar support pad.

7. Seat Depth Adjustment

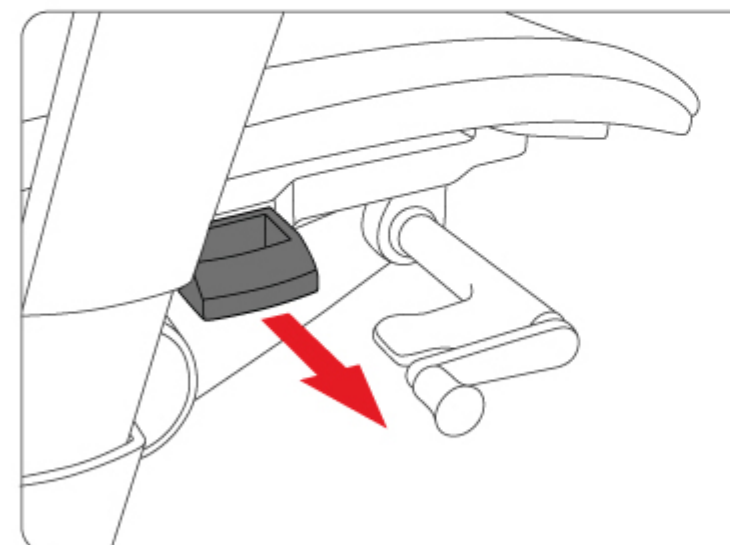

To adjust the depth of the seat base, locate the tab underneath the seat base. Pull tab out and configure seat base by hand to desired configuration.

8. Headrest Height & Angle Adjustment

(Only available in BR200M, BR010M, BR200C, BR010C, BR100S, BR010S, BR100L and BR010L models.)



▲ Headrest Height Adjustment
To configure the height of the headrest, lift up or down to desired configuration.



▲ Headrest Angle Adjustment
To configure the angle of the headrest, turn in and out to desired configuration.




Product Dimension (BRAVO)


※unit:mm(inch)

BRAVO MESH

BR050M / BR250M

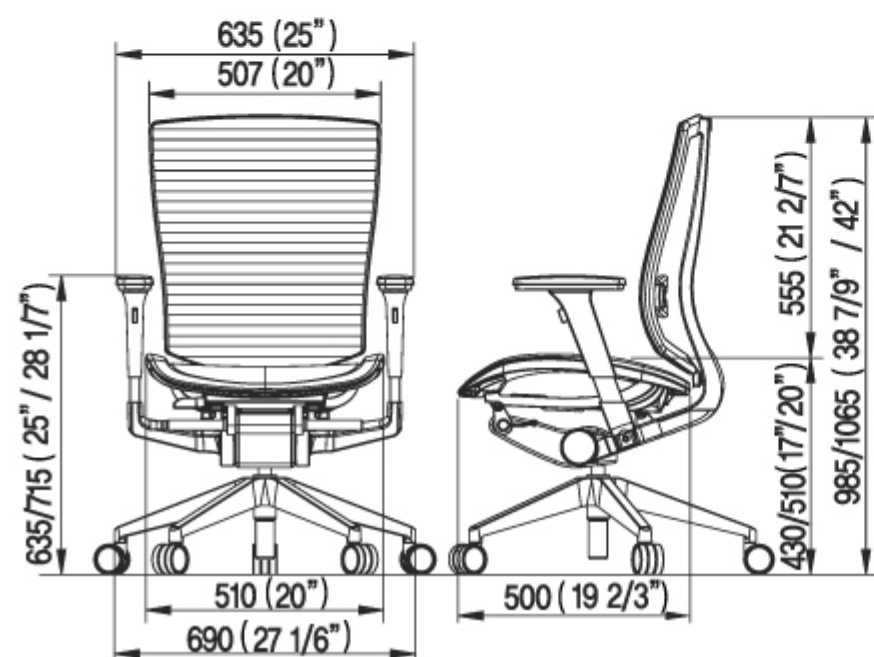


BR010M / BR200M

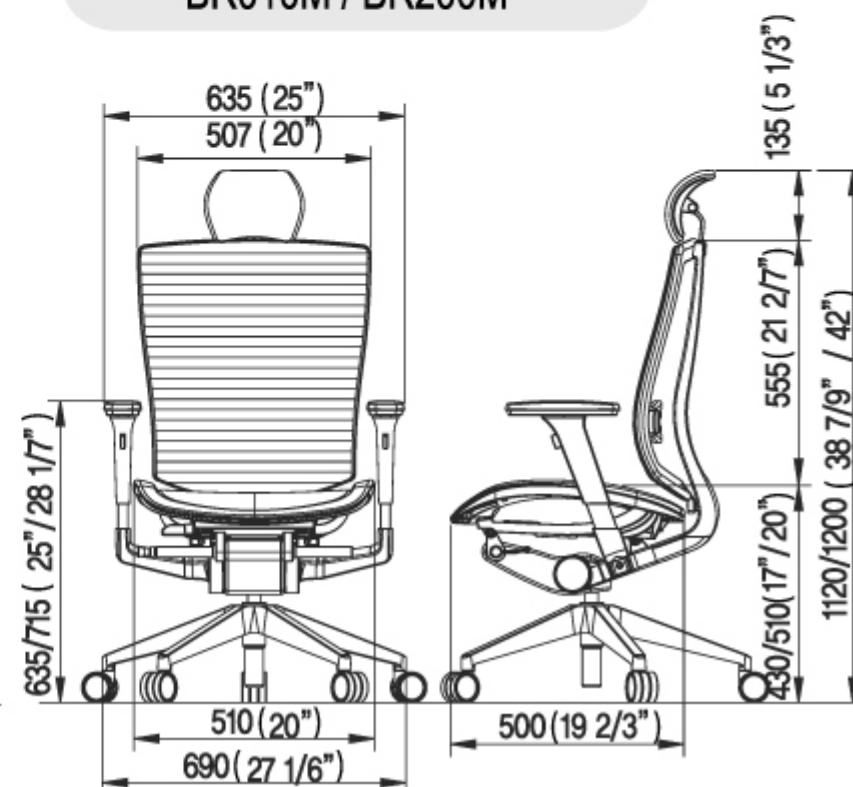


BRAVO SPONGE (FABRIC)

BR050S / BR150S

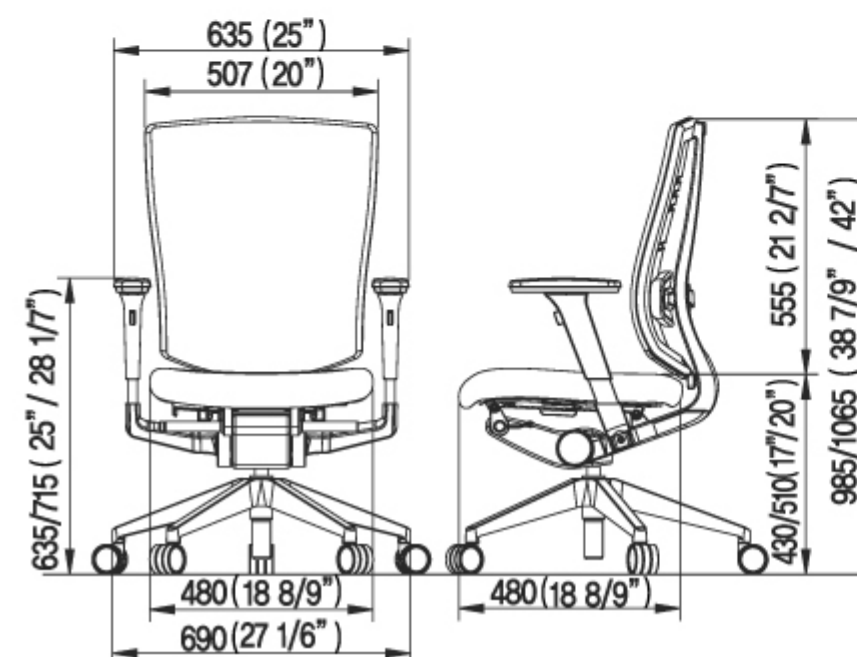


BR010S / BR100S

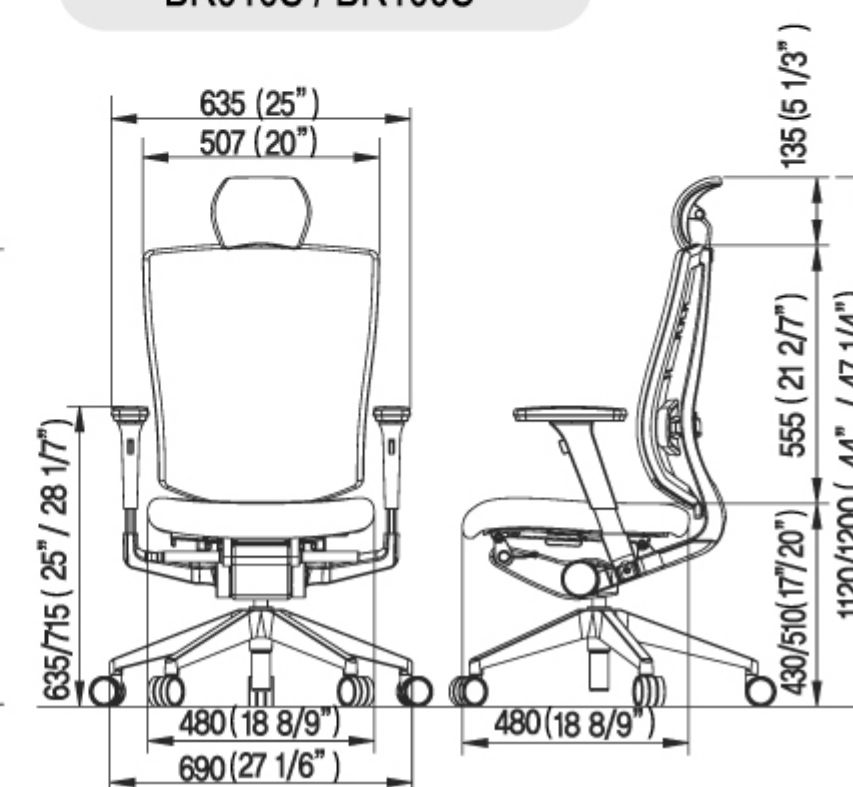


BRAVO COMBI (MESH/FABRIC)

BR050C / BR250C

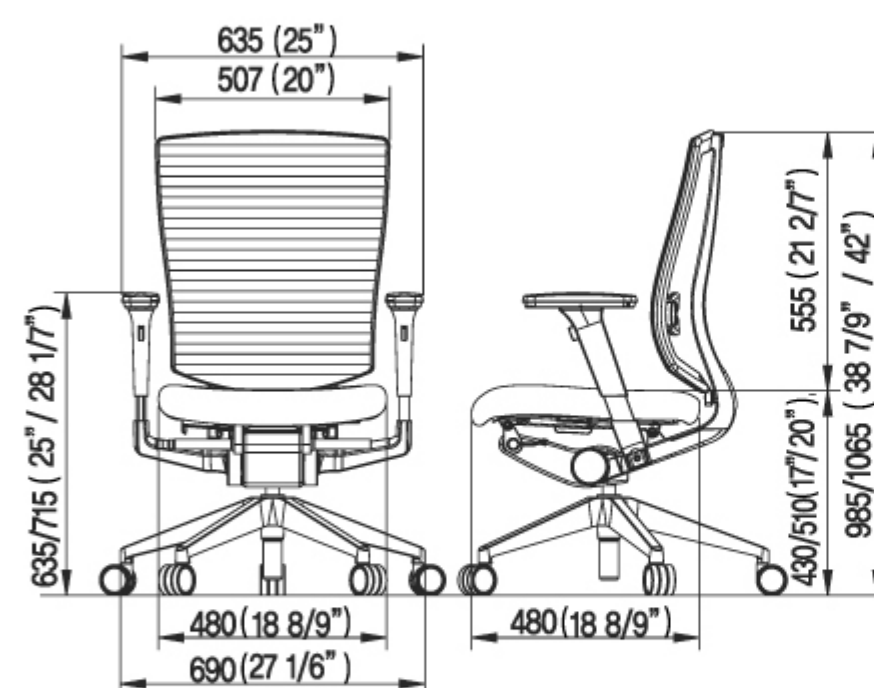


BR010C / BR200C

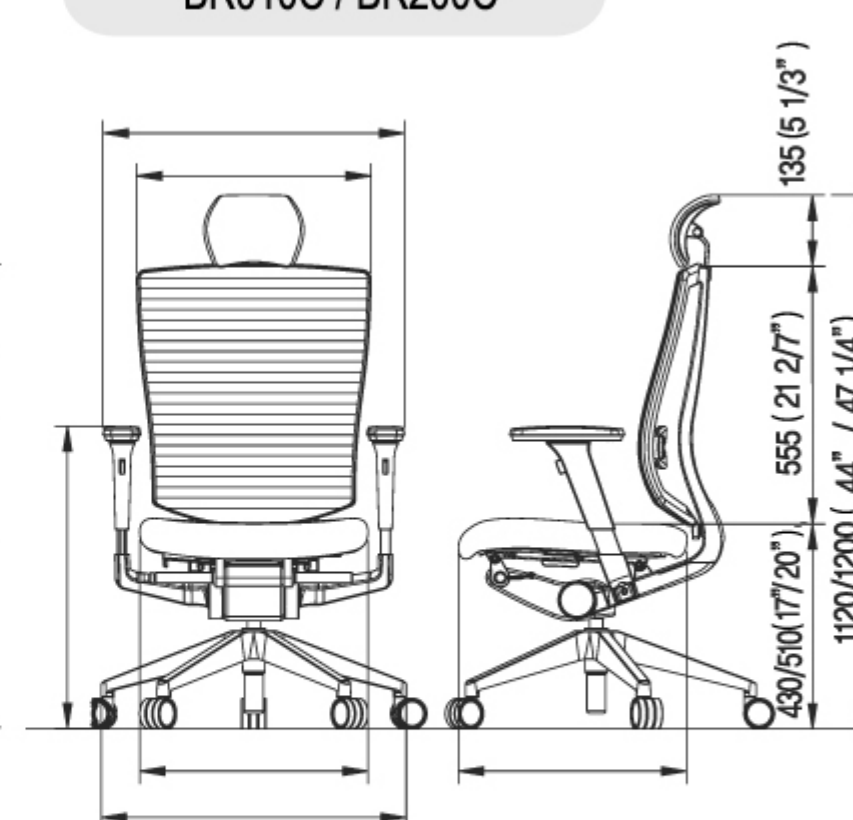

BRAVO LEATHER

BR010L / BR100L

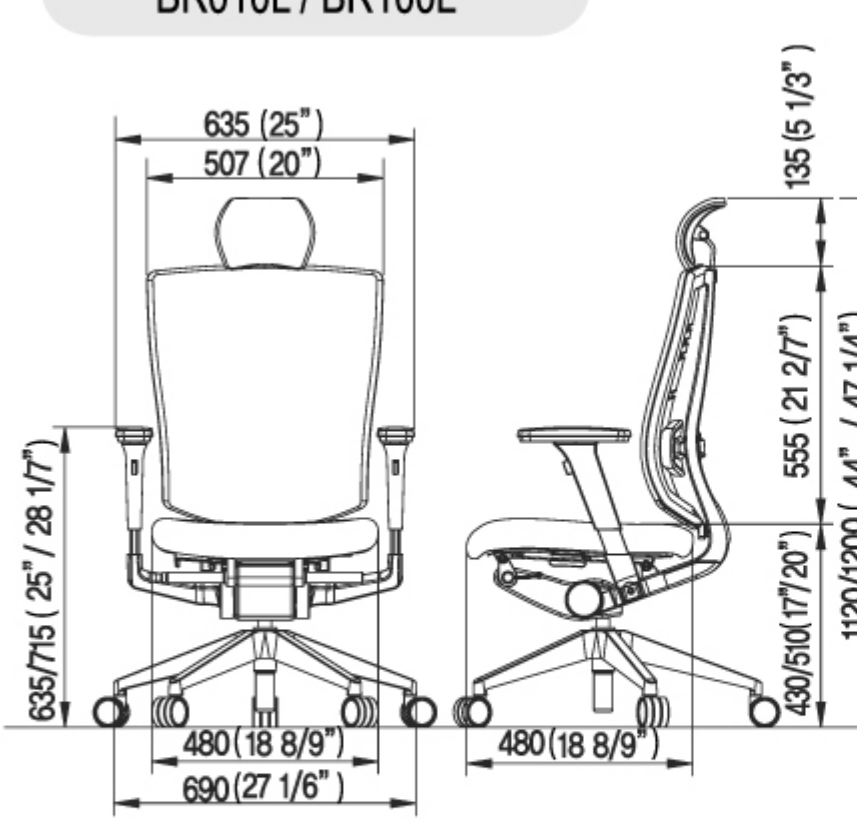

Before You Report It Broken

Tilt-Lock is Not Working




1. Please lift the tilt-lock lever all the way up.
2. After tilting backrest to desired degree, push tilt-lock lever all the way down.

TIP!

The tilt-lock lever must be pushed all the way to lock the backrest in place.

Tilt-Lock Will Not Release

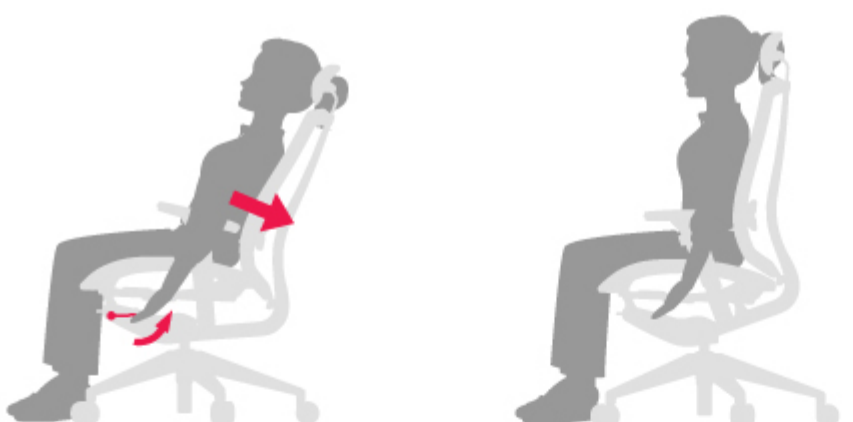


1. While pushing back on the backrest, lift tilt-lock lever up.
2. This should release the tilt-lock and the backrest will return to its original state.

TIP!

Sometimes the tilt-lock will hold a backrest in place. This can easily be corrected by applying a slight pressure on the backrest while lifting the tilt-lock lever up.

Wheel Has Fallen Off

The caster wheels are designed to come off for various reasons. In such cases, just reapply the wheel by applying pressure. It has been inserted correctly when you hear a click.

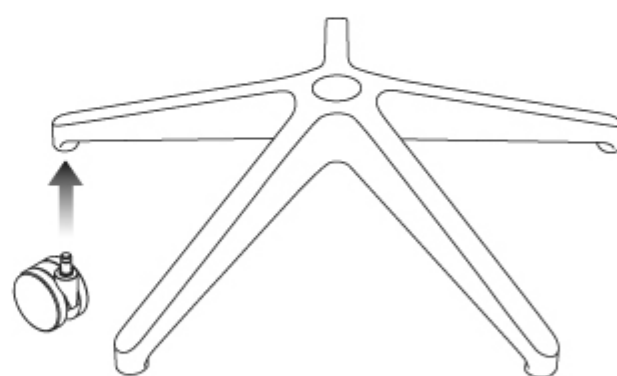

For Your Safety

- This chair is only to be used for 1 person at a time.
- This chair is only to be used indoors. Outdoor use is strongly opposed.

Warnings and Prohibitions:

All warnings listed here, if not met or followed, can result in severe injury.



- Do not tilt backrest at an irresponsible angle and speed.
- Do not use excessive force or apply excessive pressure to armrests.
- Do not STAND atop the seat base.
- Do not use chair as a sleeping unit. When used incorrectly, excessive use of this chair can cause damage to the body and even death.
- Do not throw chair.
- Do not insert any item or body part inside the gap located beneath the seat base and above the chair mechanism.
- Do not go underneath the seat base.
- Stay away from use of sharp objects when utilizing the chair.
- Do not expose chair to extreme moisture.
- If chair is damaged because of user interference, all warranties and manufacturer responsibilities will be void.



- When moving the chair, please apply steady pressure and move slowly.
- Do not use excessive force when operating levers. This may result in breakage and damage.
- Please exercise care when handling sharp objects.
- Keep careful maintenance of wheels. Dust and other materials may get stuck and cause damage.
- Dry weather and environments may cause static electricity.
- When used atop "soft" floors, there is a possibility of damage to floors from the wheels. In these cases, it is strongly recommended that a floor-mat or chair-mat be utilized.
- In the case when a humidifier (or equivalent machinery) is present, there is the possibility that white powder may be present on and around the chair. This is just from condensation of the water being used by the machinery. This is not harmful in anyway.

Limited Warranty

LIMITED WARRANTY TERMS & CONDITIONS

1. All DUOFLEX products comply with the highest standard of quality assurance and inspection programs. DUOFLEX products are fabricated using more than 100 pieces of parts which have undergone stringent superiority tests.
2. In case any manufacturing or material defect with DUOFLEX chair is found, all parts will be provided free of charge during the warranty period from the original purchase date.
3. This limited warranty is valid for THREE YEARS to FIVE YEARS under an applicable warranty classification (from the date of purchase) against all possible manufacturing defects arising from materials and workmanship.
4. This warranty becomes invalid should the serial number (barcode) be removed or altered. All repairs and service work under these warranties must be performed only by DUOFLEX authorized agent. Such service shall be provided during normal business hours. Customers are advised to contact DUOFLEX authorized agent for further details.
5. The warranty amount is limited to no more than the value of the product. It does not cover damage caused by misuse or neglect, accidents, abrasions, normal wear and tear or any manner of tampering, self modifications, abuse or Act of God.
6. If the purchased DUOFLEX product is damaged due to the above-mentioned causes, customers are advised to contact their local agent who will advise them of the appropriate solution which may be subjected to payment of a fee.
7. If identical materials or models are not available at the time of repair or replacement, DUOFLEX authorized agent reserves all rights to substitute parts or models of equal quality or value.
8. THIS LIMITED WARRANTY IS THE SOLE REMEDY FOR PRODUCT DEFECT AND NO OTHER EXPRESS OR IMPLIED WARRANTY IS PROVIDED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. WE SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM ANY PRODUCT DEFECT.

WARRANTY CLASSIFICATION		
PERIOD OF WARRANTY	PARTS	CLASSIFICATION
5 Year	Body Frame	Backrest Frame, Armrest Frame and Other Body Frames
3 Year	Mechanism, Cylinder, Form, Casters	Malfunction of Adjusting Height & Width, Swiveling and Locking.
3 Year	Flexible Rubber Connector, Seat Pan Materials (Mesh, Fabric and Leather)	Damage and Discoloration of Materials.

M

Memo

This image shows a full page of white paper with horizontal dashed lines, typical of primary-ruled notebook paper. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings present.



Memo

-----	-----
-----	-----
-----	-----
-----	-----
-----	-----
-----	-----
-----	-----
-----	-----
-----	-----
-----	-----
-----	-----
-----	-----
-----	-----
-----	-----
-----	-----